DISASSEMBLY INSTRUCTION MANUAL



RECYCLING & DISASSEMBLY

All the furniture in this instruction manual is ecolabelled and designed to be long-lasting products made to endure years to come. The furniture is 100% recyclable and parts can be fully separated and recycled. All parts can be delivered to a suitable recycling facility.

AAC 085	CPH 190 TABLE	SO
AAC 12 6	CPH DEUX 210 TABLE44	SO
AAC 14 7	CPH DEUX 215 BENCH45	SO
AAC 16 8	CPH DEUX 220 TABLE	SO
AAC 18	LAYOUT ARMCHAIR 211 212 213 214 61	SO
AAC 20 10	LAYOUT ARMCHAIR 221 222 223 22462	TAI
AAC 22	LAYOUT ARMCHAIR 231 232 233 23463	TR
AAC 24	LAYOUT ARMCHAIR 241 242 243 24464	TR
AAC 26	LAYOUT FULL UPHOLSTERY	X-L
AAC 5014	LAYOUT SEAT UPHOLSTERY	X-L
AAC 52	LOOP STAND ROUND TABLE51	
AAS 32	LOOP STAND TABLE50	
AAS 38	PASTIS TABLE47	
AMANTA	RESULT ARMCHAIR34	
ANNEX TABLE ALUMINIUM LEGS 4 LEGS 59	RESULT ARMCHAIR WITH UPHOLSTERY35	
ANNEX TABLE ALUMINIUM LEGS 6 LEGS 60	RESULT CHAIR32	
ANNEX TABLE WOOD LEGS	RESULT CHAIR WITH UPHOLSTERY33	
ARBOUR ECO3	REVOLT CHAIR36	
BOA TABLE52	SOFT EDGE 40 CHAIR	
CHISEL LOUNGE CHAIR	SOFT EDGE 40 CHAIR WITH UPHOLSTERY 19	
COLOUR RACK C-SHAPE54	SOFT EDGE 50 SLED	
COLOUR RACK S-SHAPE53	SOFT EDGE 50 SLED WITH UPHOLSTERY 21	
CPH 10 TABLE	SOFT EDGE 60 CHAIR	
PH 25 TABLE 39	SOFT EDGE 60 CHAIR WITH UPHOLSTERY 23	
CPH 30 EXTENDABLE TABLE 41	SOFT EDGE 70 STOOL24	
CPH 30 TABLE40	SOFT EDGE 72 STOOL	
CPH 90 TABLE42	SOFT EDGE 80 BAR STOOL	

43	SOFT EDGE 82 BAR STOOL27
44	SOFT EDGE 90 BAR STOOL 28
45	SOFT EDGE 90 BAR STOOL WITH UPHOLSTERY 29
46	SOFT EDGE 100 LOUNGE
61	SOFT EDGE 100 LOUNGE WITH UPHOLSTERY 31
62	TABURETE 8 BAR STOOL
63	TRIANGLE LEG BENCH48
64	TRIANGLE LEG TABLE49
66	X-LINE CHAIR55
65	X-LINE CHAIR TROLLEY



ARBOUR ECO

STEP 1

Remove the cushions

STEP 2


Turn the sofa upside down and separate the base from the frame by unscrewing all the screws


STEP 3


Remove the webbing base by lifting it up


STEP 4

Unscrew all the screws to remove the steel profile and the wood profile from the frame

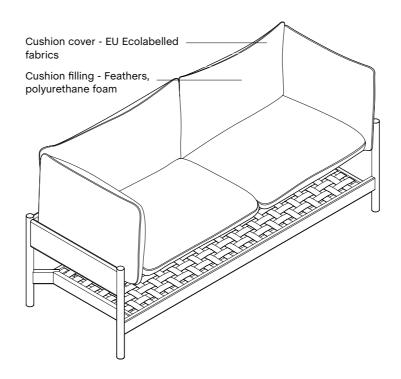

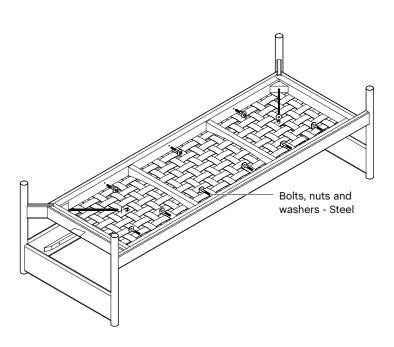

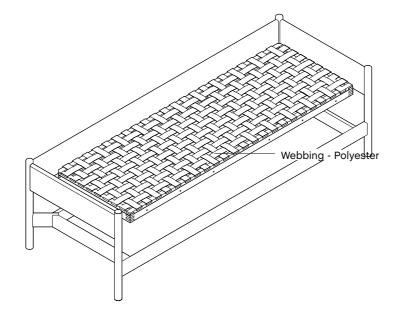


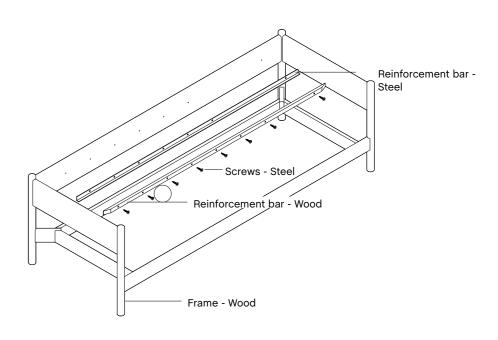



CHISEL LOUNGE CHAIR

STEP 1
Remove fabric and foam from the frame

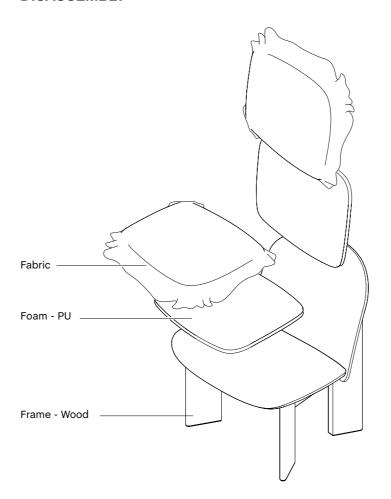



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the gliders from the legs

STEP 4

Separate the base from the seat

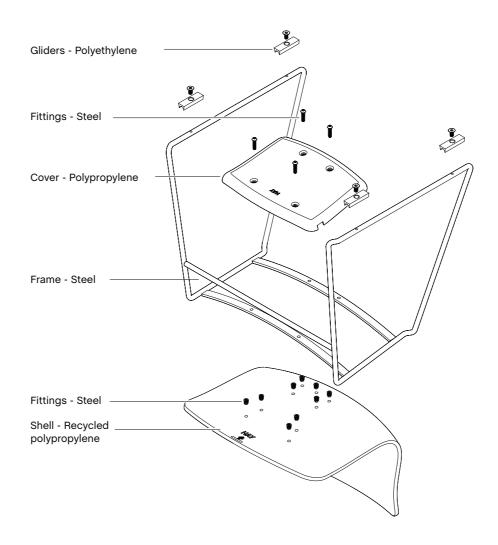



STEP 1

Turn the chair upside down


STEP 2

Remove all the bushings from the bottom of the seat

STEP 3 Remove the gliders from the legs

STEP 4

Separate the base from the seat

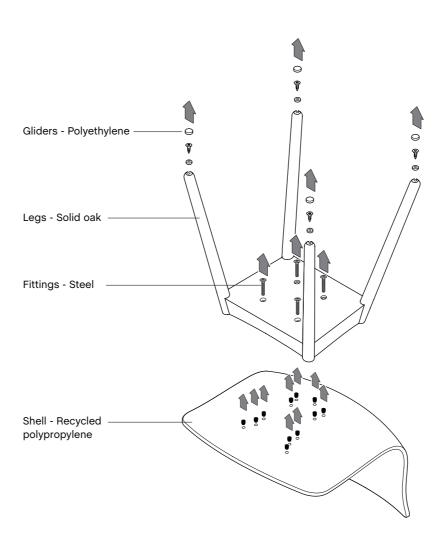



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the wheels from the legs

STEP 4

Separate the base from the seat

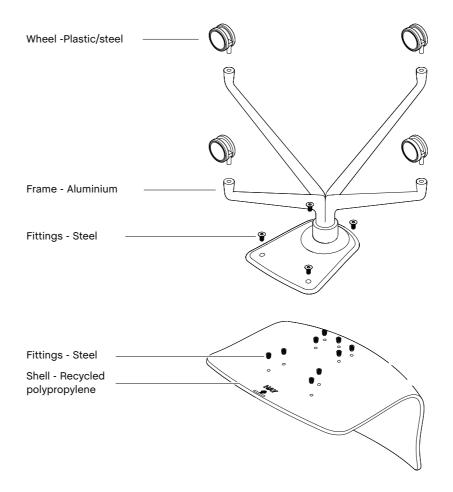



STEP 1

Turn the chair upside down


STEP 2

Remove all the bushings from the bottom of the seat

STEP 3 Remove the gliders from the legs

STEP 4

Separate the base from the seat

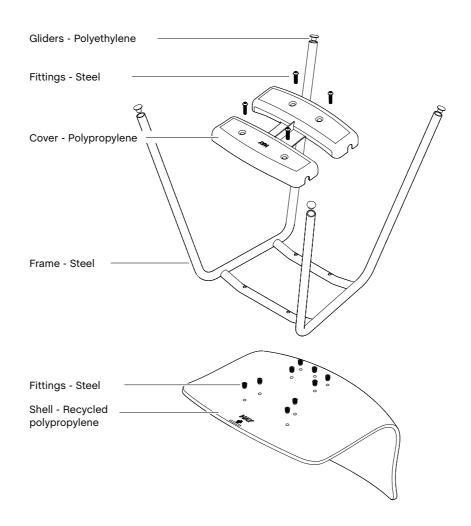



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the gliders from the legs

STEP 4

Separate the base from the seat

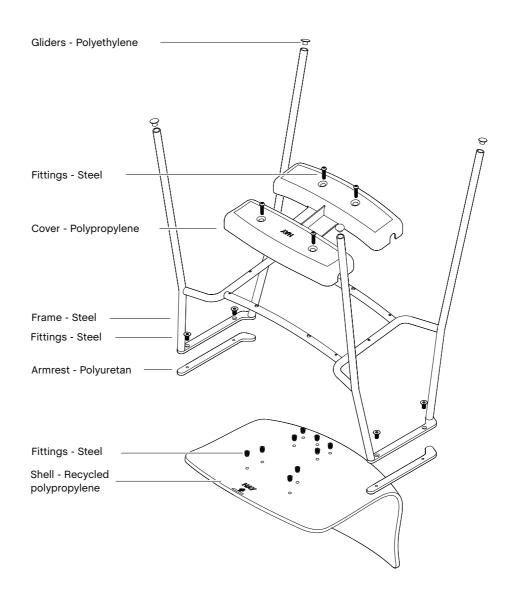



STEP 1

Turn the chair upside down


STEP 2

Remove all the bushings from the bottom of the seat

STEP 3 Remove the gliders from the legs

STEP 4

Separate the base from the seat

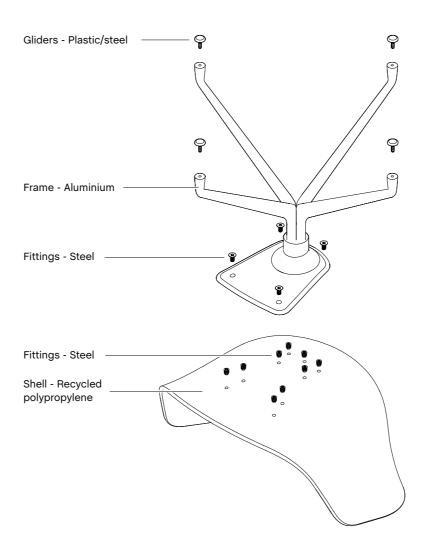



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the gliders from the legs

STEP 4

Separate the base from the seat

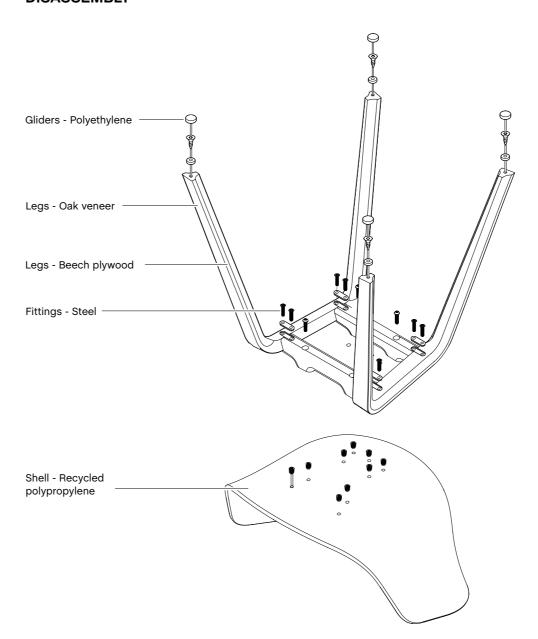



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the wheels from the legs

STEP 4

Separate the base from the seat

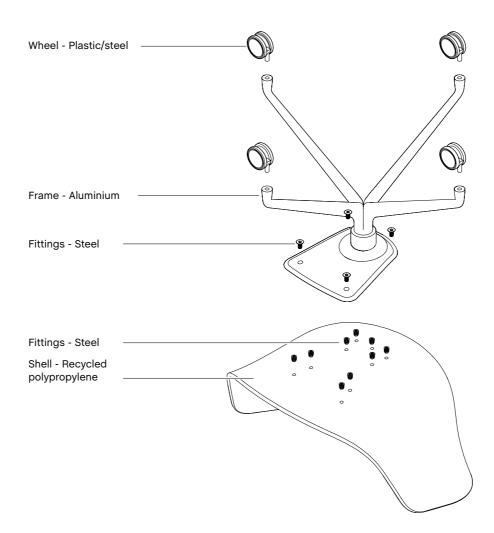



STEP 1

Turn the chair upside down


STEP 2

Remove all the bushings from the bottom of the seat

STEP 3 Remove the gliders from the legs

STEP 4

Separate the base from the seat

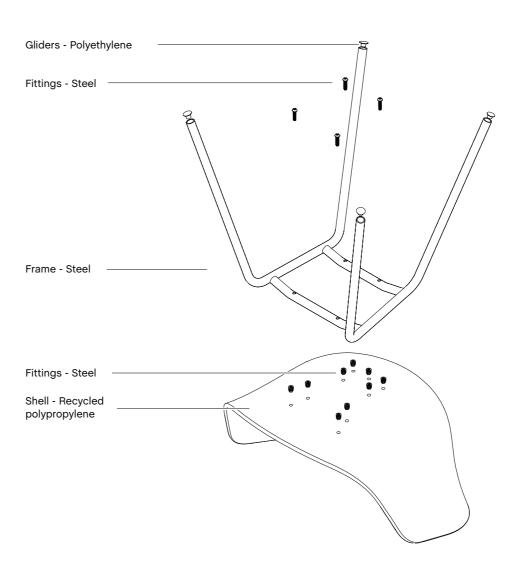



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the wheels from the legs

STEP 4

Separate the base from the seat

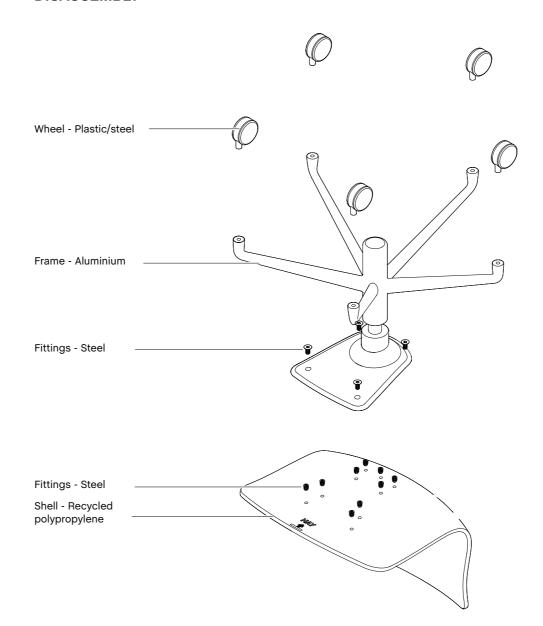



STEP 1

Turn the chair upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the wheels from the legs

STEP 4

Separate the base from the seat

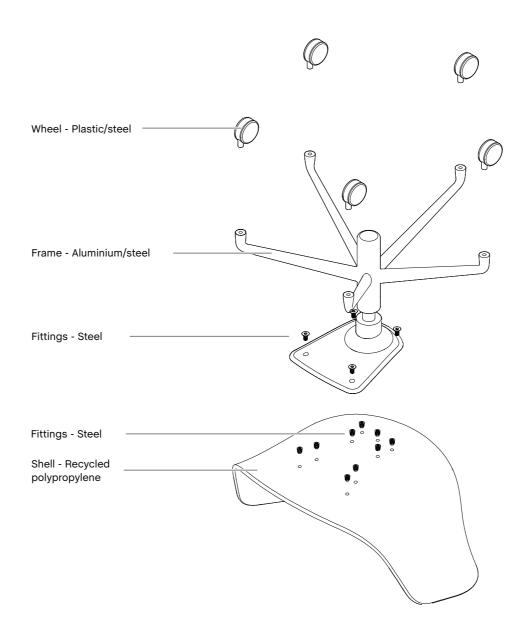



AAS 32

STEP 1

Turn the barstool upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the gliders and the footrest from the legs

STEP 4

Separate the base from the seat

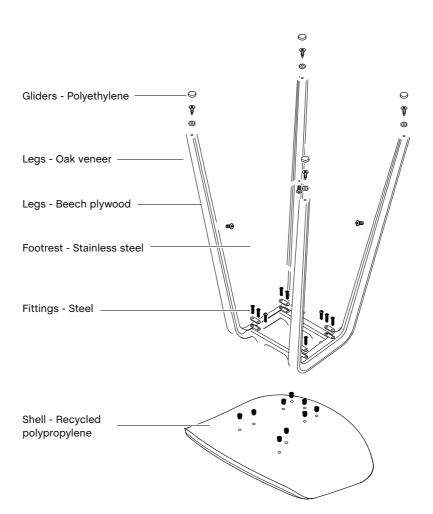



AAS 38

STEP 1

Turn the barstool upside down

STEP 2


Remove all the bushings from the bottom of the seat

STEP 3

Remove the gliders and the footrest from the legs

STEP 4

Separate the base from the seat

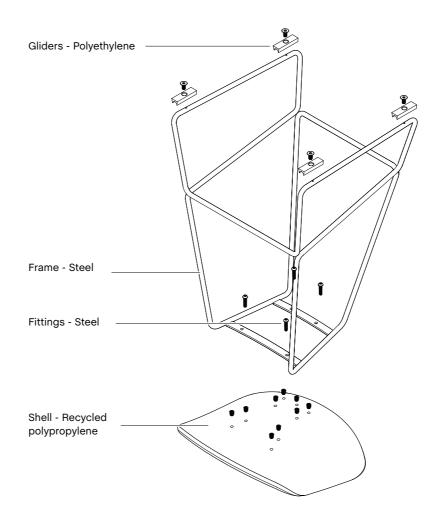



SOFT EDGE 40 CHAIR

STEP 1


Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Pull out the gliders from the legs

STEP 3

Turn the chair upside down and drill out the rivets holding the cover

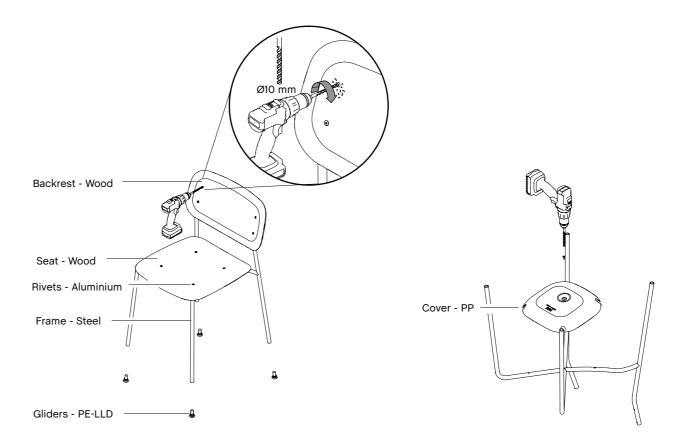



SOFT EDGE 40 CHAIR WITH UPHOLSTERY

STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2


Pull out the gliders from the legs

STEP 3

Turn the chair upside down and drill out the rivets holding the cover

STEP 4

Remove the upholstery and the foam from the wooden shell

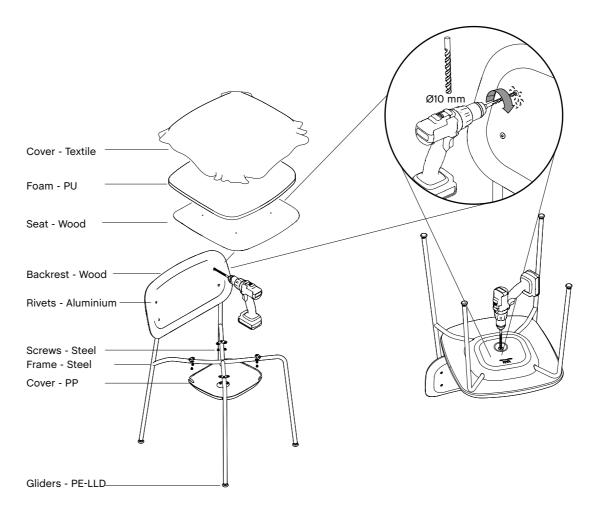



SOFT EDGE 50 SLED

STEP 1


Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Unscrew the gliders from the sled legs

STEP 3

Turn the chair upside down and drill out the rivets holding the cover

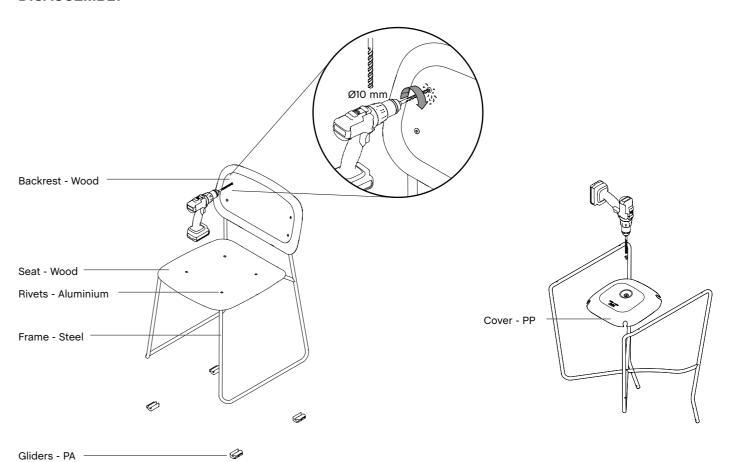



SOFT EDGE 50 SLED WITH UPHOLSTERY

STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2


Unscrew the gliders from the sled legs

STEP 3

Turn the chair upside down and drill out the rivets holding the cover

STEP 4

Remove the upholstery and the foam from the wooden shell

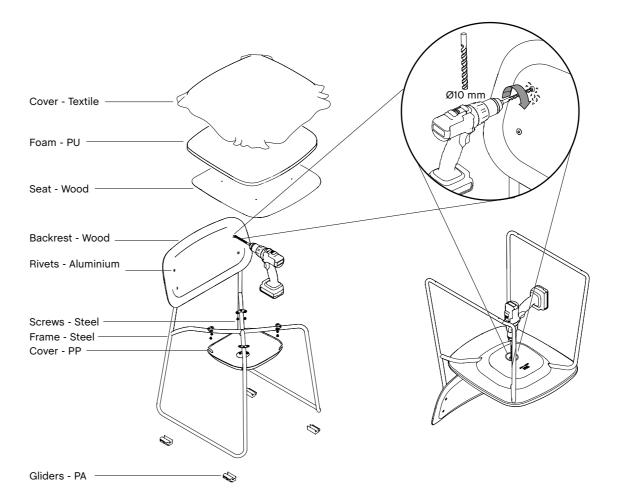



SOFT EDGE 60 CHAIR

STEP 1


Turn the chair upside down

STEP 2

Remove the cap from the gliders

STEP 3

Unscrew the screw and remove the gliders' receivers

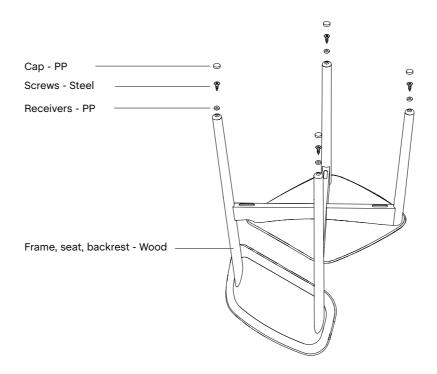



SOFT EDGE 60 CHAIR WITH UPHOLSTERY

STEP 1

Turn the chair upside down

STEP 2


Remove the cap from the gliders


STEP 3

Unscrew the screw and remove the gliders' receivers

STEP 4

Remove the upholstery and the foam from the wooden shell

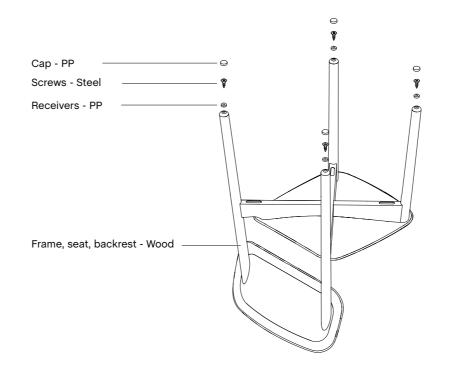

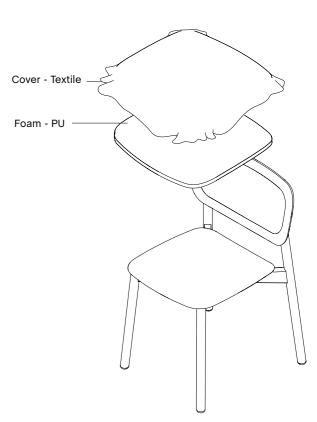



SOFT EDGE 70 STOOL

STEP 1


Hold the seat while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Pull out the gliders from the legs

STEP 3

Turn the chair upside down and drill out the rivets holding the cover

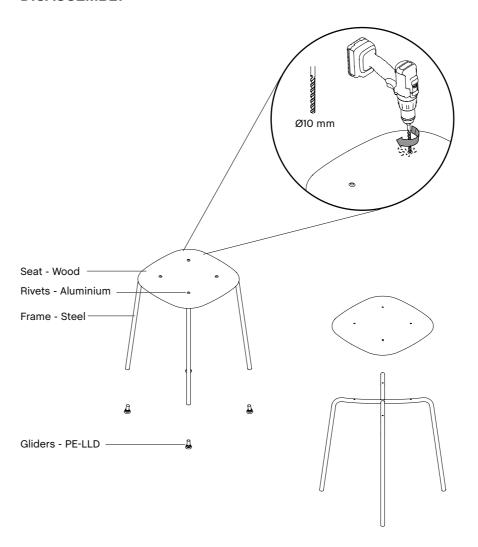



SOFT EDGE 72 STOOL

STEP 1


Turn the stool upside down

STEP 2

Remove the cap from the gliders

STEP 3

Unscrew the screw and remove the gliders' receivers

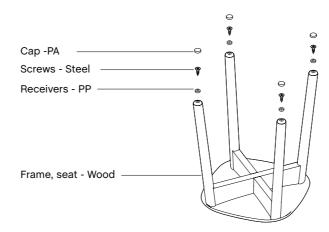



SOFT EDGE 80 BAR STOOL

STEP 1


Hold the seat while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Pull out the gliders from the legs

STEP 3

Turn the stool upside down and drill out the rivets holding the cover

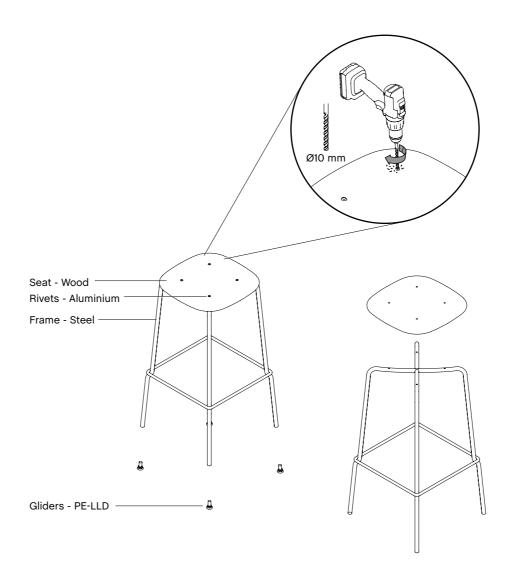



SOFT EDGE 82 BAR STOOL

STEP 1

Turn the bar stool upside down

STEP 2


Remove the cap from the gliders

STEP 3

Unscrew the screw and remove the gliders' receivers

STEP 4

Unscrew the screws holding the footrest and remove it

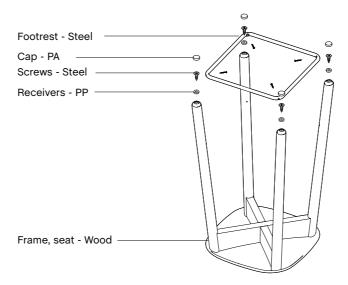



SOFT EDGE 90 BAR STOOL

STEP 1


Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Pull out the gliders from the legs

STEP 3

Turn the bar stool upside down and drill out the rivets holding the cover

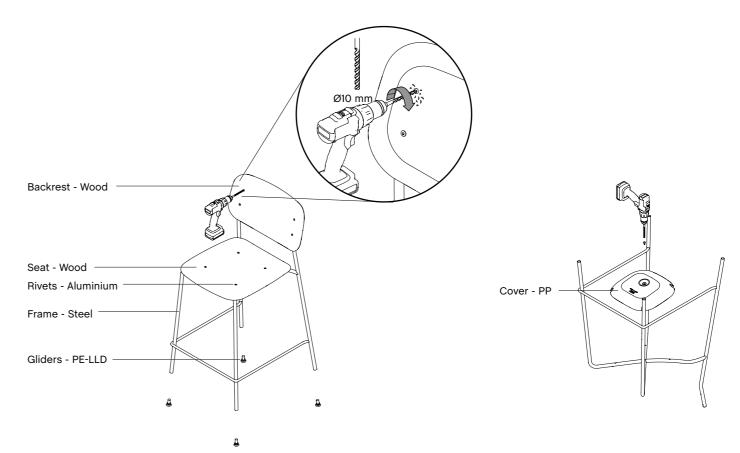



SOFT EDGE 90 BAR STOOL WITH UPHOLSTERY

STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2


Pull out the gliders from the legs

STEP 3

Turn the bar stool upside down and drill out the rivets holding the cover

STEP 4

Remove the upholstery and the foam from the wooden shell

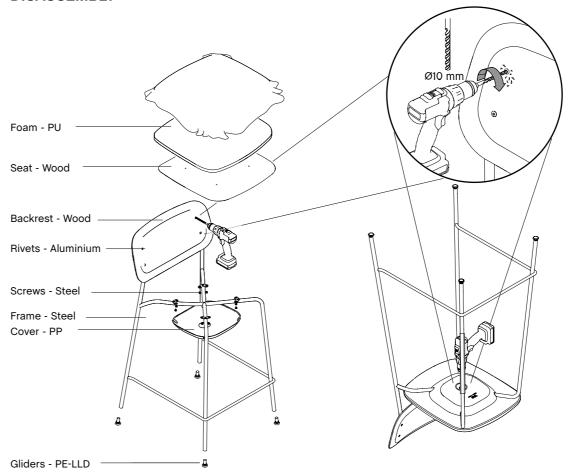



SOFT EDGE 100 LOUNGE

STEP 1


Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Pull out the gliders from the legs

STEP 3

Turn the bar stool upside down and drill out the rivets holding the cover

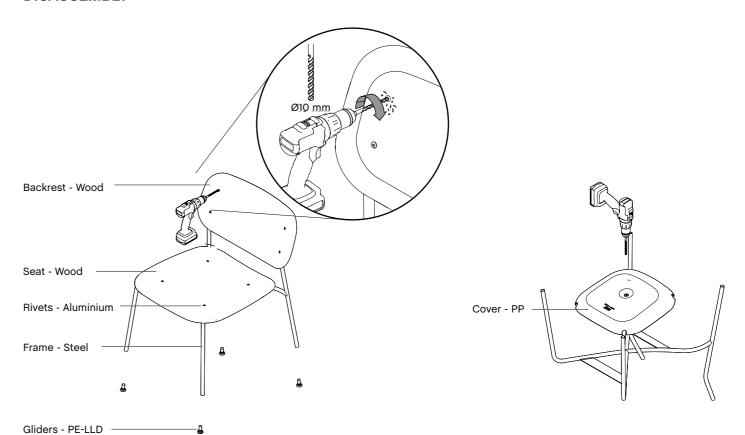



SOFT EDGE 100 LOUNGE WITH UPHOLSTERY

STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2


Pull out the gliders from the legs

STEP 3

Turn the bar stool upside down and drill out the rivets holding the cover

STEP 4

Remove the upholstery and the foam from the wooden shell

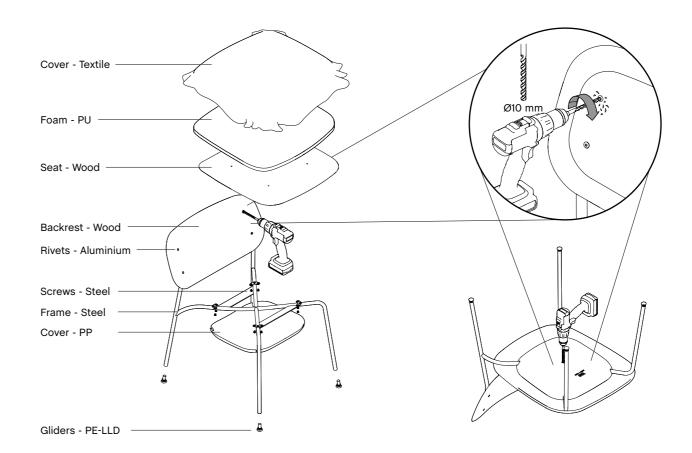




RESULT CHAIR


STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Remove the bumpers from the backrest posts and the gliders from the legs

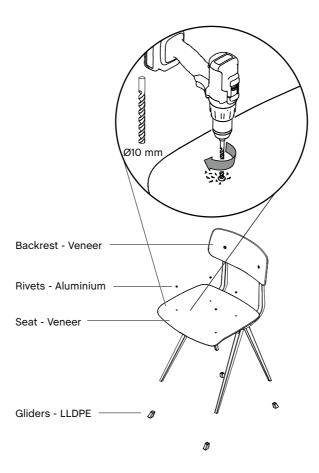

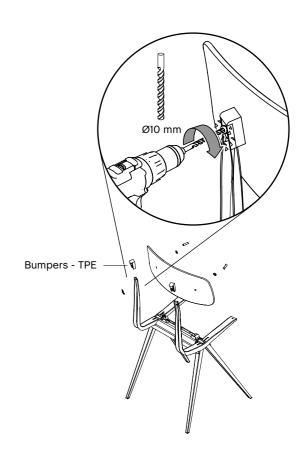



RESULT CHAIR WITH UPHOLSTERY

STEP 1

Unscrew the screws underneath the seat

STEP 2


Remove the upholstery and the foam from the wooden shell


STEP 3

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 4

Remove the bumpers from the backrest posts and the gliders from the legs

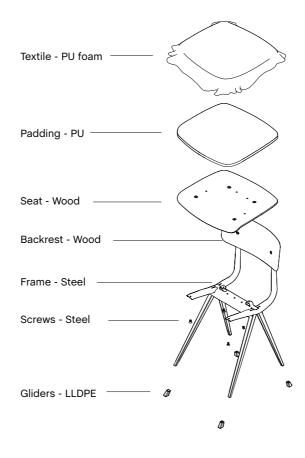

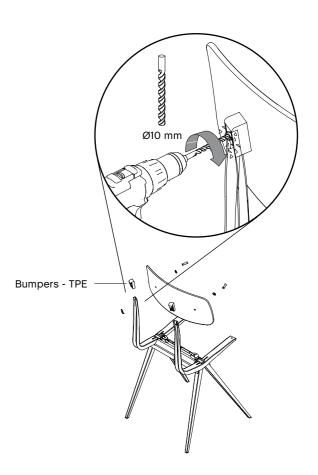




RESULT ARMCHAIR


STEP 1

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2

Remove the bumpers from the backrest posts and the gliders from the legs

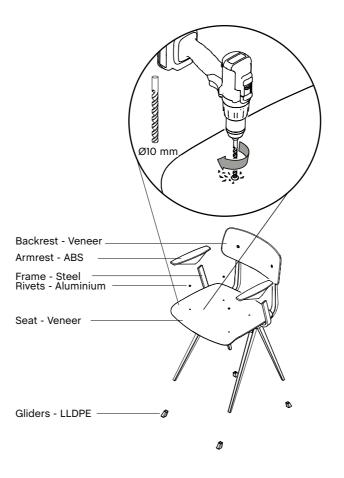

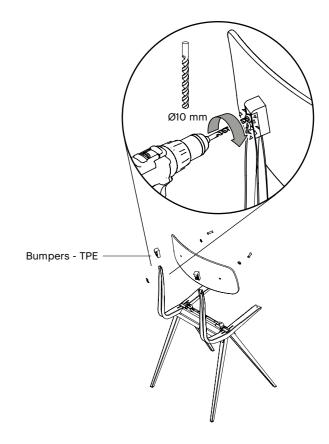



RESULT ARMCHAIR WITH SEAT UPHOLSTERY

STEP 1

Unscrew the screws underneath the seat

STEP 2


Remove the upholstery and the foam from the wooden shell


STEP 3

Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 4

Remove the bumpers from the backrest posts and the gliders from the legs

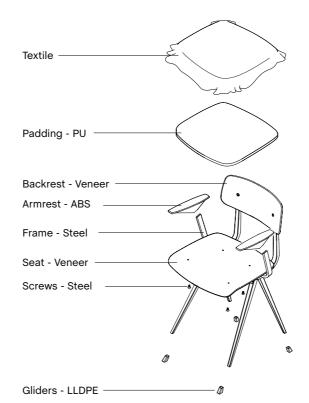

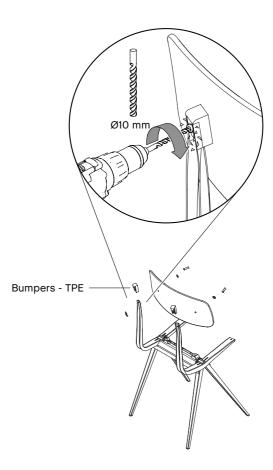



REVOLT CHAIR


STEP 1


Unscrew the screws holding the seat and backrest

STEP 2

Remove the screws and fittings underneath the seat

STEP 3 Pull the gliders out of the legs

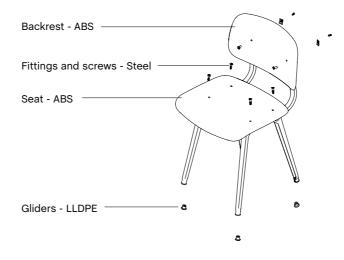


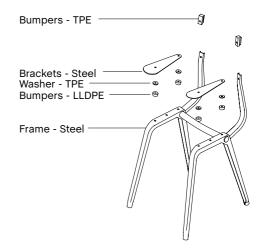



TABURETE 8 BAR STOOL

DISASSEMBLY

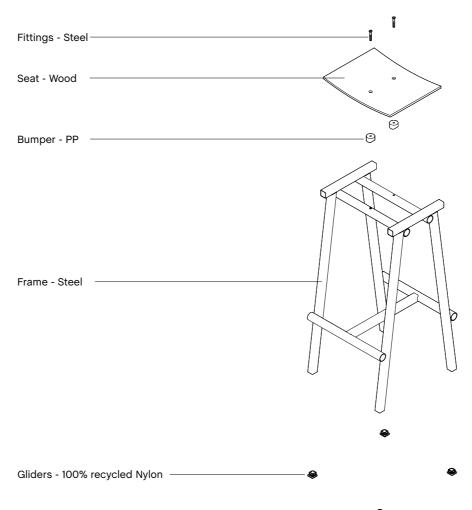

₩



CPH 10 TABLE

STEP 1

Turn the table upside down

STEP 2


Unscrew all the screws holding the legs and crossbar

STEP 3

Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4

Unscrew the gliders from the legs

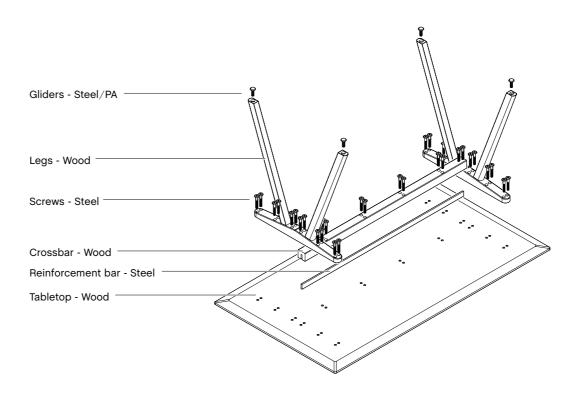



CPH 25 TABLE

STEP 1


Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and crossbar

STEP 3

Unscrew the gliders from the legs

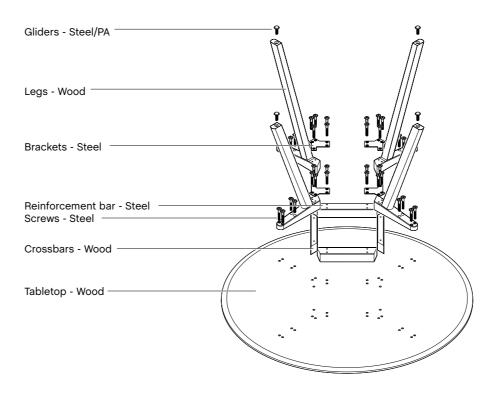



CPH 30 TABLE

STEP 1

Turn the table upside down

STEP 2


Unscrew all the screws holding the legs and crossbar

STEP 3

Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4

Unscrew the gliders from the legs

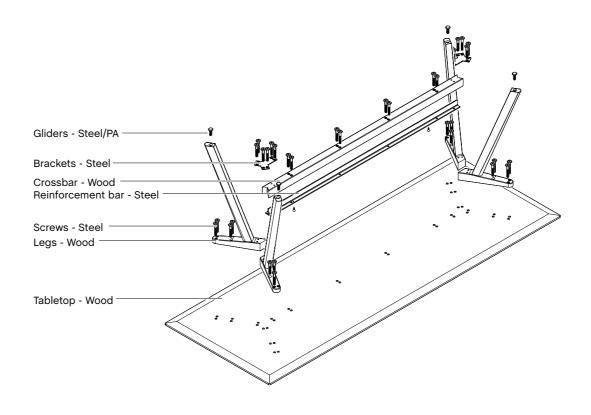



CPH 30 EXTENDABLE TABLE

STEP 1

Turn the table upside down

STEP 2


Unscrew all the screws holding the legs and crossbar

STEP 3

Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4

Unscrew the gliders from the legs

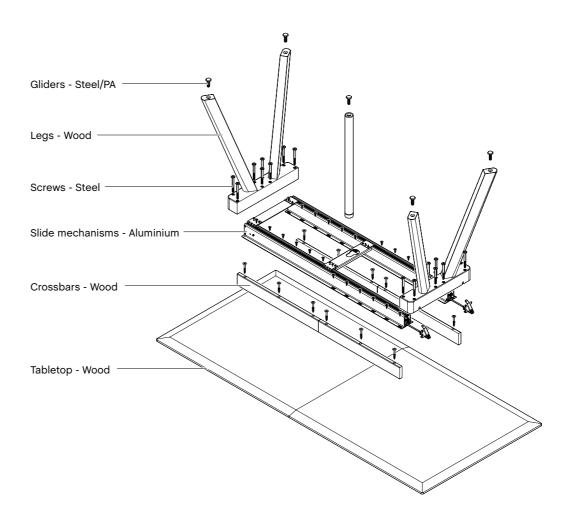



CPH 90 TABLE


STEP 1

Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and crossbar

STEP 3 Unscrew the gliders from the legs

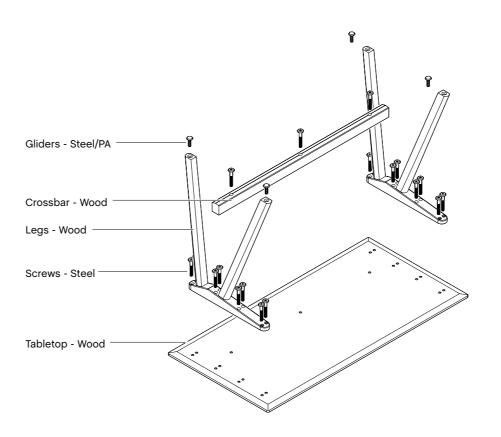




CPH 190 TABLE

STEP 1 Turn the table upside down

STEP 2 Unscrew the gliders from the legs

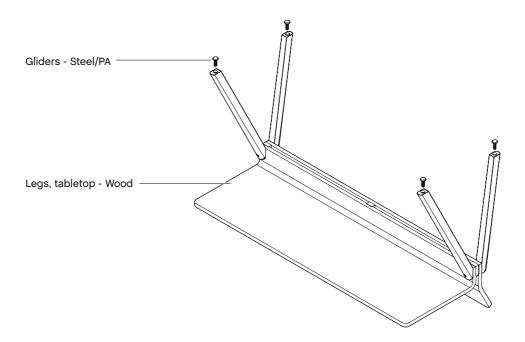



CPH DEUX 210 TABLE


STEP 1

Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and crossbar

STEP 3 Unscrew the gliders from the legs

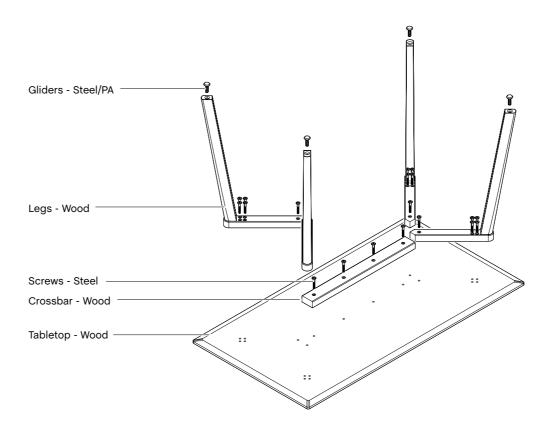



CPH DEUX 215 BENCH


STEP 1

Turn the bench upside down

STEP 2

Unscrew all the screws holding the legs and crossbar

STEP 3 Unscrew the gliders from the legs

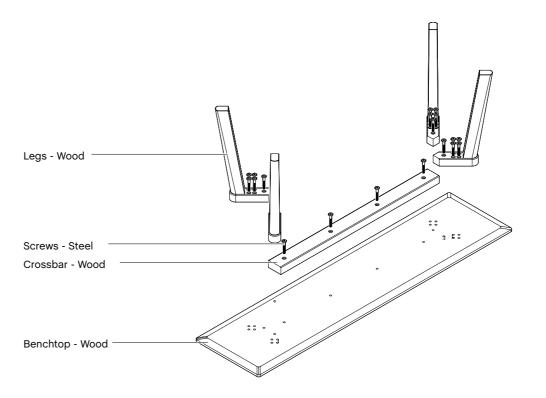



CPH DEUX 220 TABLE


STEP 1

Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and crossbar

STEP 3 Unscrew the gliders from the legs

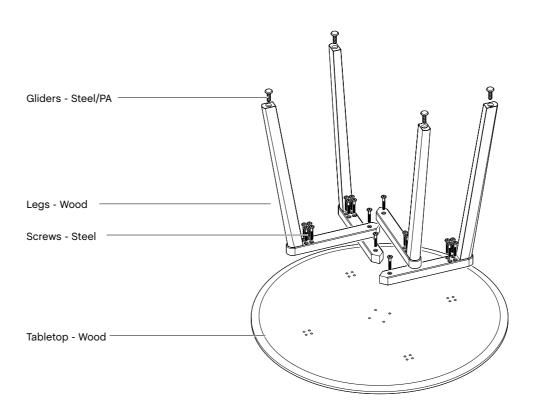





PASTIS TABLE

STEP 1 Turn the table upside down

STEP 2 Unscrew all the screws holding the legs and the column

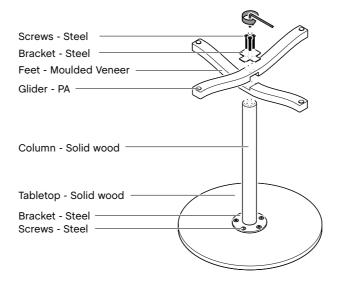

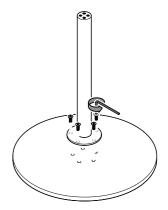





TRIANGLE LEG BENCH

STEP 1

Turn the bench upside down

STEP 2

Unscrew the bolts holding the legs

STEP 3


Unscrew the feet and the tapping screw in the top of the leg

STEP 4

Unscrew all the screws to separate the frame from the bench

STEP 5

Unscrew the screws holding the brackets in each corner

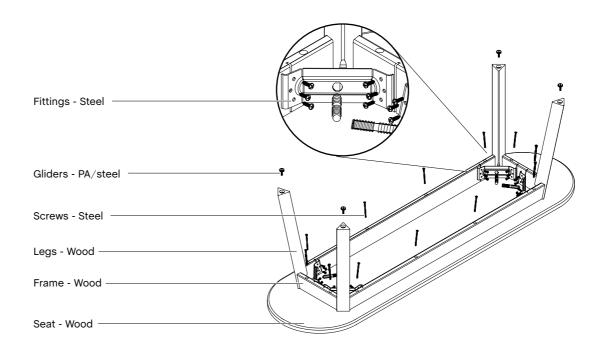



TRIANGLE LEG TABLE

STEP 1

Turn the table upside down

STEP 2


Unscrew the bolts holding the legs

STEP 3

Unscrew the feet and the tapping screw in the top of the leg

STEP 4

Unscrew all the screws to separate the frame from the table

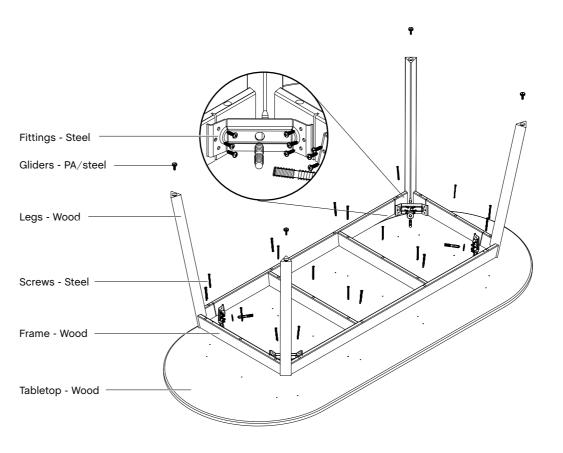




LOOP STAND TABLE

STEP 1

Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and support bar

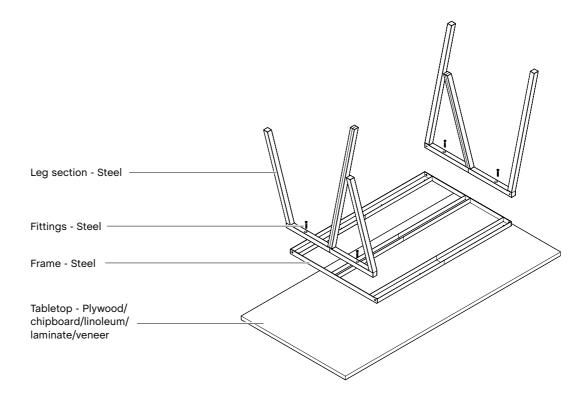




LOOP STAND ROUND TABLE

STEP 1 Turn the table upside down

STEP 2 Unscrew all the screws holding the leg section

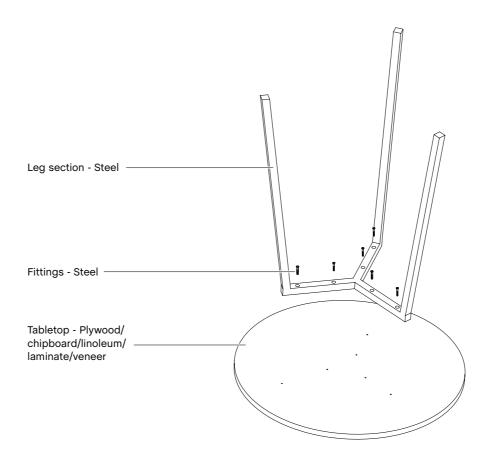



BOA TABLE

STEP 1


Turn the table upside down

STEP 2

Unscrew all the screws holding the legs and crossbar


STED 3

Unscrew the gliders from the legs

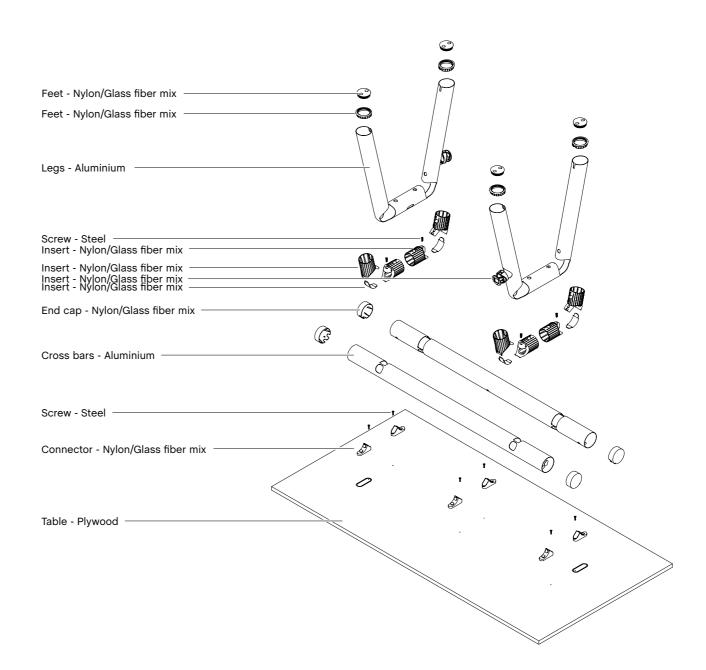




COLOUR RACK S-SHAPE

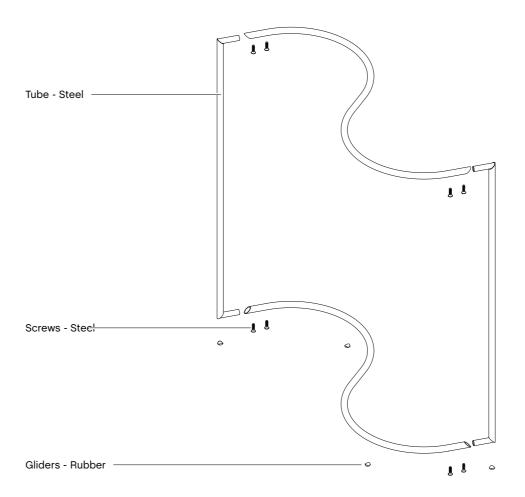



COLOUR RACK C-SHAPE

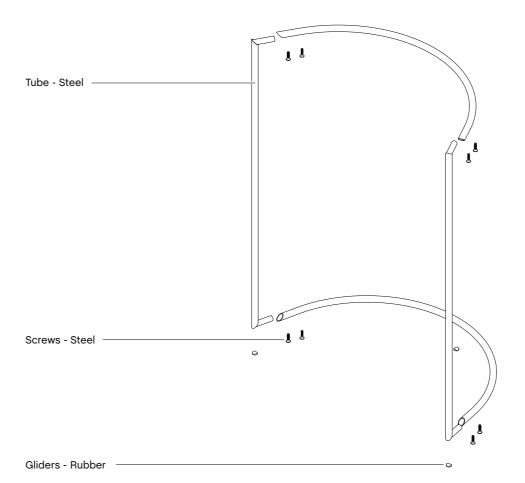




X-LINE CHAIR

STEP 1 Turn the chair upside down

STEP 2 Remove the gliders from the legs

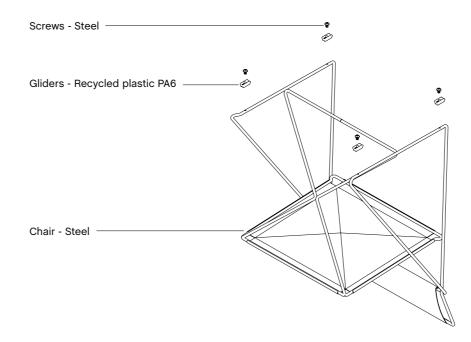



X-LINE CHAIR TROLLEY

STEP 1

Unscrew the screws attaching the front wheels

STEP 2


Unscrew the screws from the back wheels

STEP 3

Remove the back wheels by detaching the lock pin

STEP 4

Remove the plastic caps from the top of the chair trolley

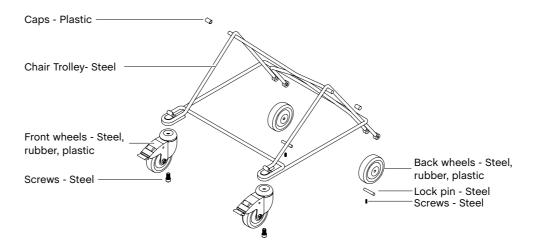



AMANTA

STEP 1

Remove the legs and unscrew the steel pins

STEP 2


Remove all cushions. Pull the tufted (capitonné) buttons on the backrest and top cushion and cut them so the cushion covers can be removed

STEP 3

Unzip the cushion covers and remove the plywood boards from both the backrest and seat cushion foam

STEP 4

Remove the steel fittings from the plywood boards

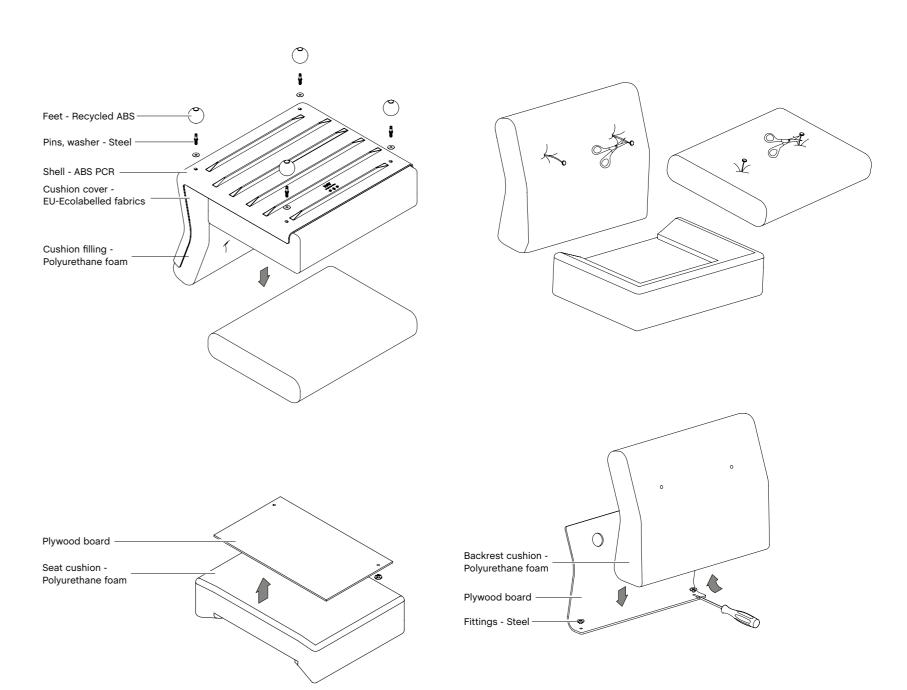



ANNEX TABLE | WOOD LEGS

STEP 1


Turn the table upside down

STEP 2

Unscrew all the screws holding the legs to the corners and aprons

STEP 3

Unscrew the gliders from the legs

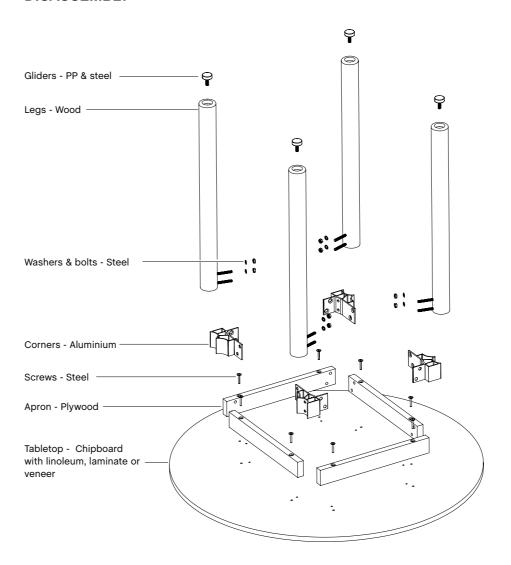



ANNEX TABLE | ALUMINIUM LEGS | 4 LEGS

STEP 1


Turn the table upside down

STEP 2

Unscrew all the screws holding the legs to the corners, the aprons, and the tabletop connectors attached to the tabletop

STEP 3

Remove the gliders from the legs

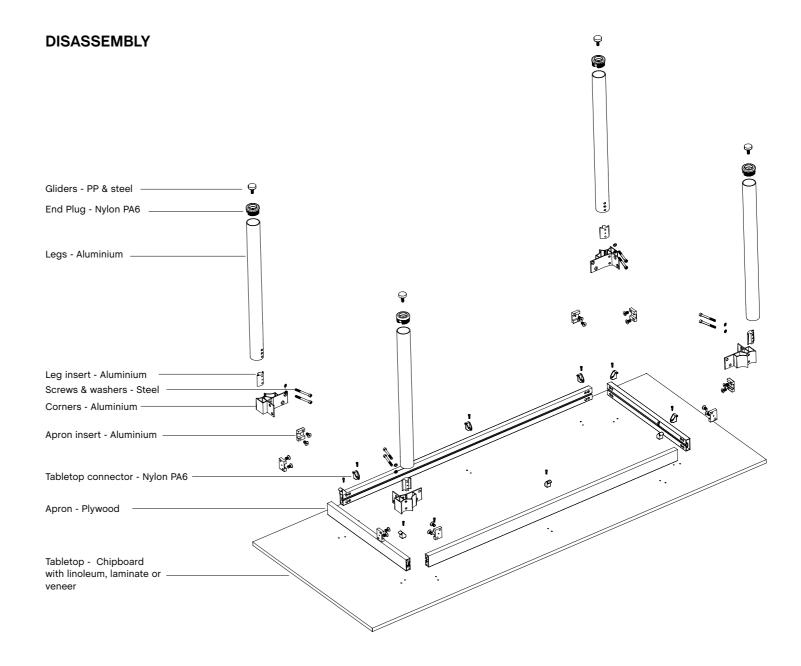



ANNEX TABLE | ALUMINIUM LEGS | 6 LEGS

STEP 1

Turn the table upside down

STEP 2


Unscrew all the screws holding the legs to the corners, the aprons, and the tabletop connectors attached to the tabletop

STEP 3

Open the table latch

STEP 4

Remove the gliders from the legs

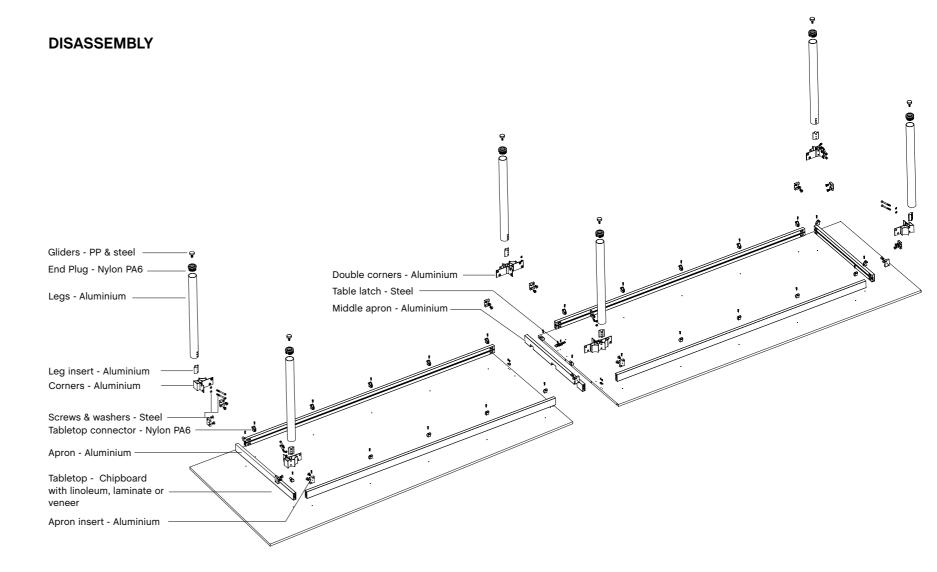



LAYOUT ARMCHAIR 211 | 212 | 213 | 214

STEP 1

Turn the chair upside down

STEP 2

Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3

Return the chair to its upright position

STEP 4

Unscrew the screws and separate the shell from the frame


STEP 5

Remove the legs and steel inserts from aluminium plate

STEP 6

Remove the gliders from the frame

If your version is 213 or 214, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

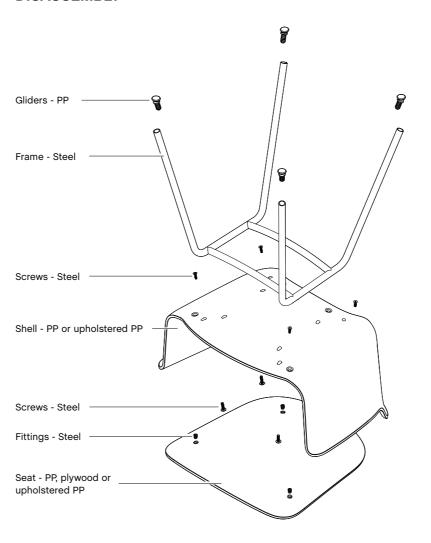



LAYOUT ARMCHAIR 221 | 222 | 223 | 224

STEP 1

Turn the chair upside down

STEP 2

Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3

Return the chair to its upright position

STEP 4

Unscrew the screws and separate the shell from the frame


STEP 5

Remove the wood legs and steel inserts from aluminium plate

STEP 6

Remove the gliders from the frame

If your version is 223 or 224, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

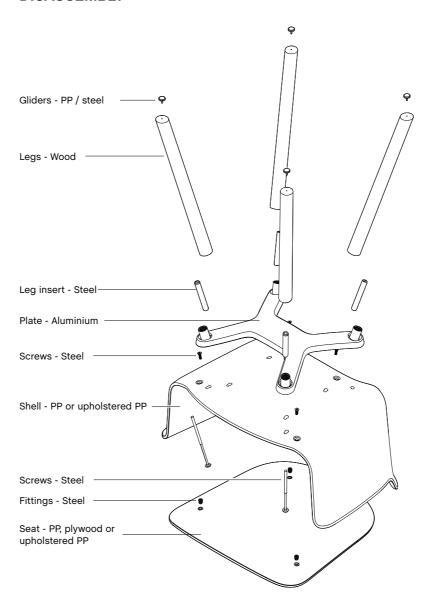



LAYOUT ARMCHAIR 231 | 232 | 233 | 234

STEP 1

Turn the chair upside down

STEP 2

Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3

Return the chair to its upright position

STEP 4

Unscrew the screws and separate the shell from the frame

STEP 5

Detach the aluminium plate from the swivel column by applying vertical force


STEP 6

Detach the foot from the swivel column by unscrewing the screws located at the bottom centre of the foot

STEP 7

Remove the gliders from the foot

If your version is 233 or 234, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

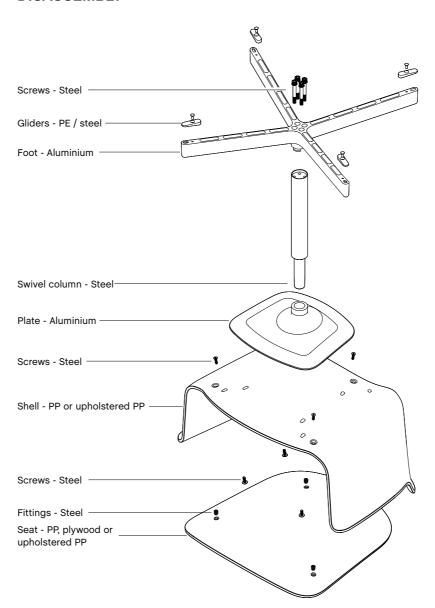




LAYOUT SEAT UPHOLSTERY

STEP 1

Once the seat is removed from the frame, turn it upside down

STEP 2 Cut the string with scissors. Separate the PU foam and textile from the seat

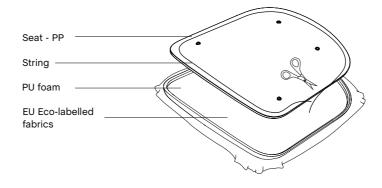



LAYOUT FULL UPHOLSTERY

STEP 1

Release the two Velcro flaps to reveal both ends of the zipper. Then open the zipper, ensuring it is completely unzipped at the end

STEP 2

Release the Velcro securing the cover to the shell, then pull the cover off

